

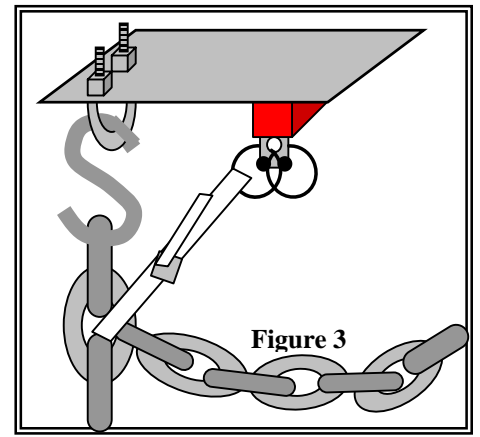


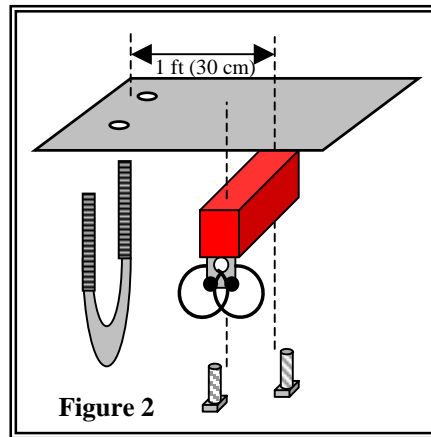

Draka Elevator Products, Inc.

The Whisper-Flex Pullout Switch Kit is to be used with Whisper-Flex® Compensating Cable and its installation hardware to provide an electrical signal that indicates the activation of the Whisper-Flex cable's Safety Loop (Figure 1).

1. The pullout switch should be installed within at least a foot (30 cm) of the U-bolt or cable support (Figure 2). If there are two Whisper-Flex Compensating Cables per car, the pullout switch should be centered between the U-bolts.
2. The pullout switch can be installed with the 4mm machine screws (Figure 2, note that the flat mounting plate is not included). Before attaching the switch to a mounting plate or bracket, ensure that the head of the pullout switch is positioned in such a way that the flat key actuator will be pulled vertically downward.
3. The split o-ring(s), one per cable/S-hook, should be placed through the center hole on the flat key actuator (Figure 2).
4. The cable tie(s), one per o-ring/cable, can then be looped through the split o-rings and the mesh grips' eye loops or the adjustment coupling and secured upon itself. This will form a secure attachment between the o-ring and the operational portion of the Whisper-Flex cable below the S-hook (Figure 3).
5. The pullout switch can be wired normally open or closed and the configuration is left to the discretion of the installer. Wire, conduit and EMT used for the wiring and its protection is not included in this kit but is available at 1-877-DRAKA-EP (1-877-372-5237).

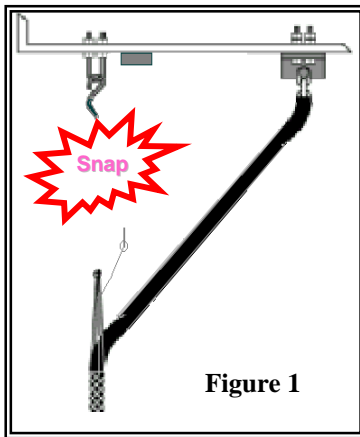

Kit Bill of Material		
ITEM	PART NAME / DESCRIPTION	QTY
1	Pullout Switch with Flat Key Actuator	1
2	Split o-ring	2
3	Cable tie	2
4	Screw - Pan head - 4 x 40 mm	2
5	Hex nut - 4 mm	2
6	Flat washer - 4 mm	4
7	Lock washer - 4 mm	2

DEP-WF-POSK/001

Whisper-Flex compensating cable, Draka Elevator Products and the Draka Globe Design are trademarks of Draka Elevator Products, Inc.

© Draka Elevator Products, Inc.
All Rights Reserved
June 2003

Draka Elevator Products, Inc.
2151 North Church Street
P.O. Box 400
Rocky Mount, NC 27804
252-972-6000
877-DRAKA-EP (877-372-5237)
Fax: 252.972.6001